


Item #1003 431 352
Item #1003 431 348

Model # PPSPADVR18
Model # PPSPAWHT18

Use and Care Guide Vanity Combo


TOOLS REQUIRED



Hammer



Safety goggles




Phillips screwdriver




Power drill




Level



Measuring tape




Wall hardware




Caulk/sealant

HARDWARE INCLUDED



AA - Handle x 1



BB - Handle Screw x 2

Installation

1 PREPARING FOR INSTALLATION




NOTE: Before installation, make sure all parts are present. Compare parts with the Hardware Included list. If any part is missing or damaged, do not attempt to install the product.

- Determine the desired mounting location, and mark the wall where the unit will be installed.




NOTE: For secure installation, the unit must be mounted to at least one wall stud.

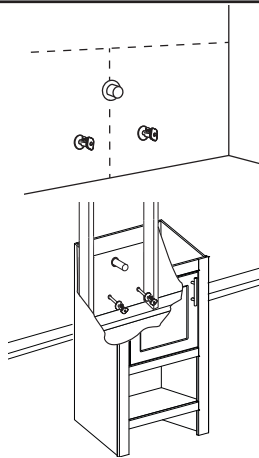





2 POSITIONING THE CABINET

- Move the cabinet into place, and use wood shims to level the cabinet against the wall.

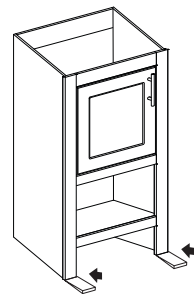

3 INSTALLING THE CABINET

- For wall stud installation, insert #12 x 3 in. screws with washers into the stud locations (not included).
- For drywall installation, drill holes at the appropriate locations and insert toggle bolts with washers (not included).
- For concrete wall installation, drill 1/4 in. holes at the appropriate locations and insert #12 wall anchors, followed by #12 x 3 in. screws (not included).

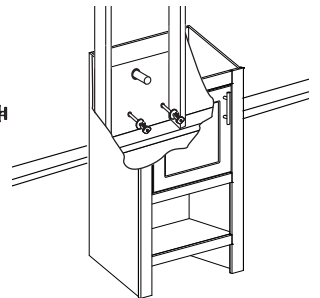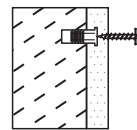

4 INSTALLING THE VANITY TOP



IMPORTANT: Do not use plumber's putty.




NOTE: The faucet, drain, and supply lines are not included. Install these parts to the vanity top according to the manufacturer's instructions.

- Apply silicone caulk/sealant (not included) to all four corners of the cabinet.
- Place the vanity top onto the cabinet.
- Position the top so that it has an equal amount of overhang on each side and use a level to ensure the vanity top surface is level.
- Apply silicone onto the seam between the edge of the vanity top and the wall, smooth the bead, and allow to cure before use.




NOTE: Matching side and back splashes available, sold separately. To purchase, visit your local Home Depot store or go to homedepot.com.

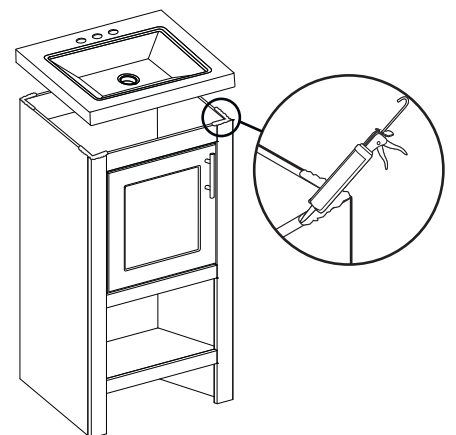

5 INSTALLING THE HARDWARE


- Attach the handle (AA) to the cabinet with the provided screw (BB).

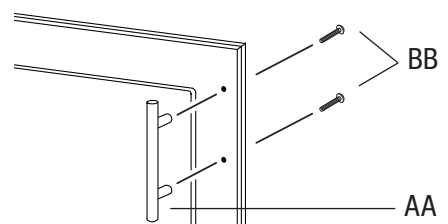

HOMEDEPOT.COM

Please contact 1-888-774-8062 for further assistance.

Troubleshooting

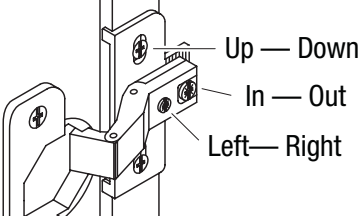
Problem	Possible Cause	Solution	
The doors do not align or the space is too big or too tight between the doors.	The hinges are misaligned.	Hold the door while loosening screws. Align the doors properly, and re-tighten the screws.	 A technical diagram of a door hinge. It shows the hinge mounted on a door and a cabinet frame. Three arrows point to the adjustment screws: a vertical arrow labeled 'Up — Down', a horizontal arrow labeled 'In — Out', and a diagonal arrow labeled 'Left — Right'.

Safety Information

Please read and understand this entire manual before attempting to assemble, operate or install the product.

Care and Cleaning

- ❑ Use a water-dampened cloth to clean the cabinet. Avoid using abrasive cleaners.
- ❑ Use a mild liquid soap and a soft cloth to clean your vanity top. Avoid using any harsh, abrasive cleaners or mineral spirits.

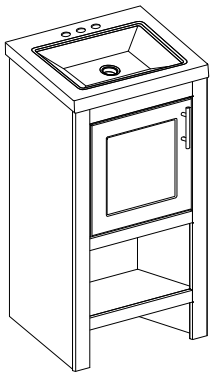

Núm. de artículo 1003 431 352
Núm. de artículo 1003 431 348


Núm. de modelo PPSPADVR18
Núm. de modelo PPSPAWHT18

Guía de uso y cuidado Combo de tocador

HERRAMIENTAS REQUERIDAS



HERRAJE INCLUIDO

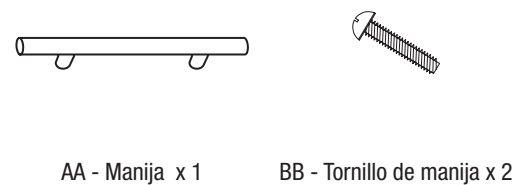

Instalación

1 PREPARACIÓN PARA LA INSTALACIÓN




NOTA: Antes de comenzar a instalar, asegúrese de que todas las partes estén presentes. Compare las partes con la lista del Herraje Incluido. Si hace falta alguna parte o se encuentra dañada, no intente instalar el producto.

- Determine la ubicación deseada del montaje y marque la pared donde se instalará la unidad.




NOTA: Para una instalación segura, la unidad debe montarse en al menos un montante de pared.

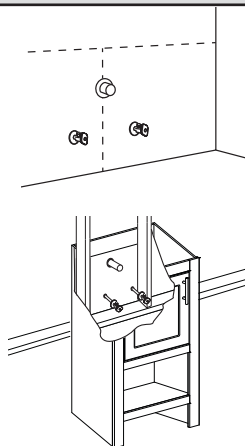


2 COLOCACIÓN DEL GABINETE

- Mueva el gabinete a su lugar y use cuñas de madera para nivelar el gabinete contra la pared.

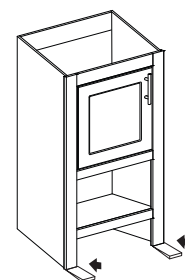

3 CÓMO INSTALAR EL GABINETE

- Para instalación en montante de pared, inserte tornillos #12 x 3 pulg. con arandelas en las ubicaciones de los montantes (no incluido).
- Para instalación en pared seca, perforo agujeros en las ubicaciones apropiadas e inserte pernos acodados con arandelas (no incluido).
- Para instalación en pared de concreto, perforo agujeros de 1/4 pulg. en las ubicaciones apropiadas e inserte anclas de pared #12, y luego tornillos #12 x 3 pulg (no incluido).

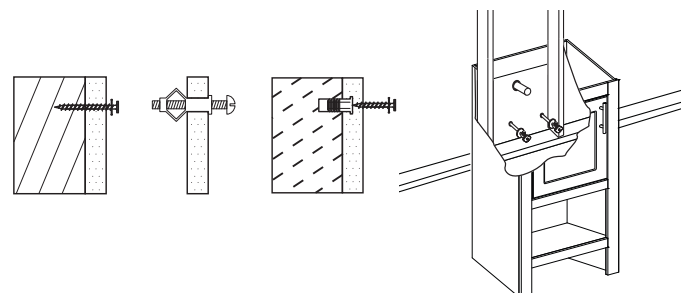

4 INSTALACIÓN DE LA CUBIERTA DEL TOCADOR



IMPORTANTE: No use masilla de fontanero.




NOTA: El grifo, desagüe y líneas de suministro no están incluidos. Instale estas piezas en la cubierta del tocador de acuerdo a las instrucciones del fabricante.

- Aplique masilla/sellador de silicona (no incluida) en las cuatro esquinas del gabinete.
- Coloque la cubierta del tocador sobre el gabinete.
- Coloque la cubierta de modo que tenga una cantidad igual de saliente en cada lado y use un nivel para asegurarse de que la superficie de la cubierta del tocador esté a nivel.
- Aplique silicona sobre la unión entre el borde de la cubierta del tocador y la pared, alise el cordón y deje que cure antes del uso.




NOTA: Las salpicaduras se venden por separado. Visite su Home Depot local o homedepot.com para comprar.

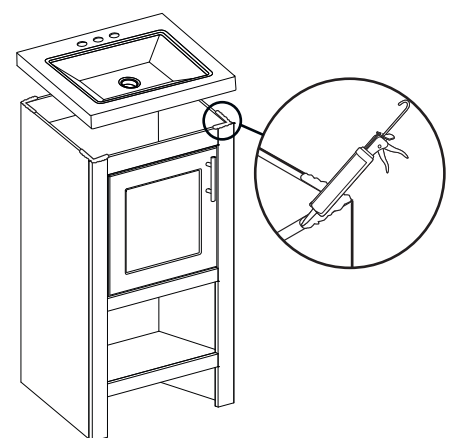


5 INSTALACIÓN DE LAS MANIJAS

- Instale la perilla (AA) en el gabinete con el tornillo (BB) proporcionados.

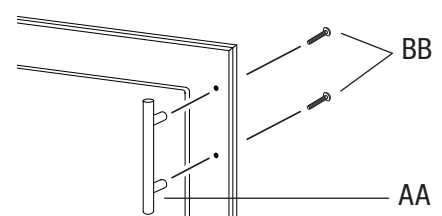

Resolución de fallas

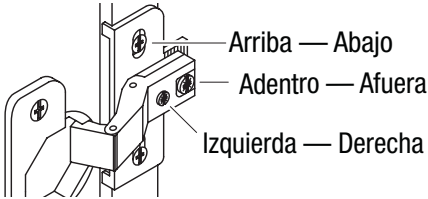Problema	Posible causa	Solución	
Las puertas no se alinean o el espacio es demasiado grande o está demasiado apretado entre las puertas.	Las bisagras están desalineadas.	Sostenga la puerta mientras afloja los tornillos. Alinee las puertas adecuadamente y apriete de nuevo los tornillos.	

Información de seguridad

Por favor, lea y comprenda este manual completo antes de intentar ensamblar, operar o instalar el producto.

Cuidado y limpieza

- ❑ Use un paño humedecido con agua para limpiar el gabinete. Evite usar limpiadores abrasivos.
- ❑ Use un jabón líquido suave y un paño suave para limpiar la cubierta de su tocador. Evite usar limpiadores ásperos, abrasivos o alcohol mineral.